


An ball float sensor in the RWHT, set at the correct level, will signal the first actuator to turn the first butterfly valve off whilst a signal then tells the second actuator to the main drain, to open.

CONTACT INFO

- +6 012-307 3753
- skyflow@skyflow.com.my
- 08:30 AM - 05:30 PM

ADDRESS

HEAD OFFICE
No. 45 Jalan PJU 1A/15, Taman Perindustrian
Jaya, Ara Damansara, 46050 Selangor Darul
Eshan, Malaysia

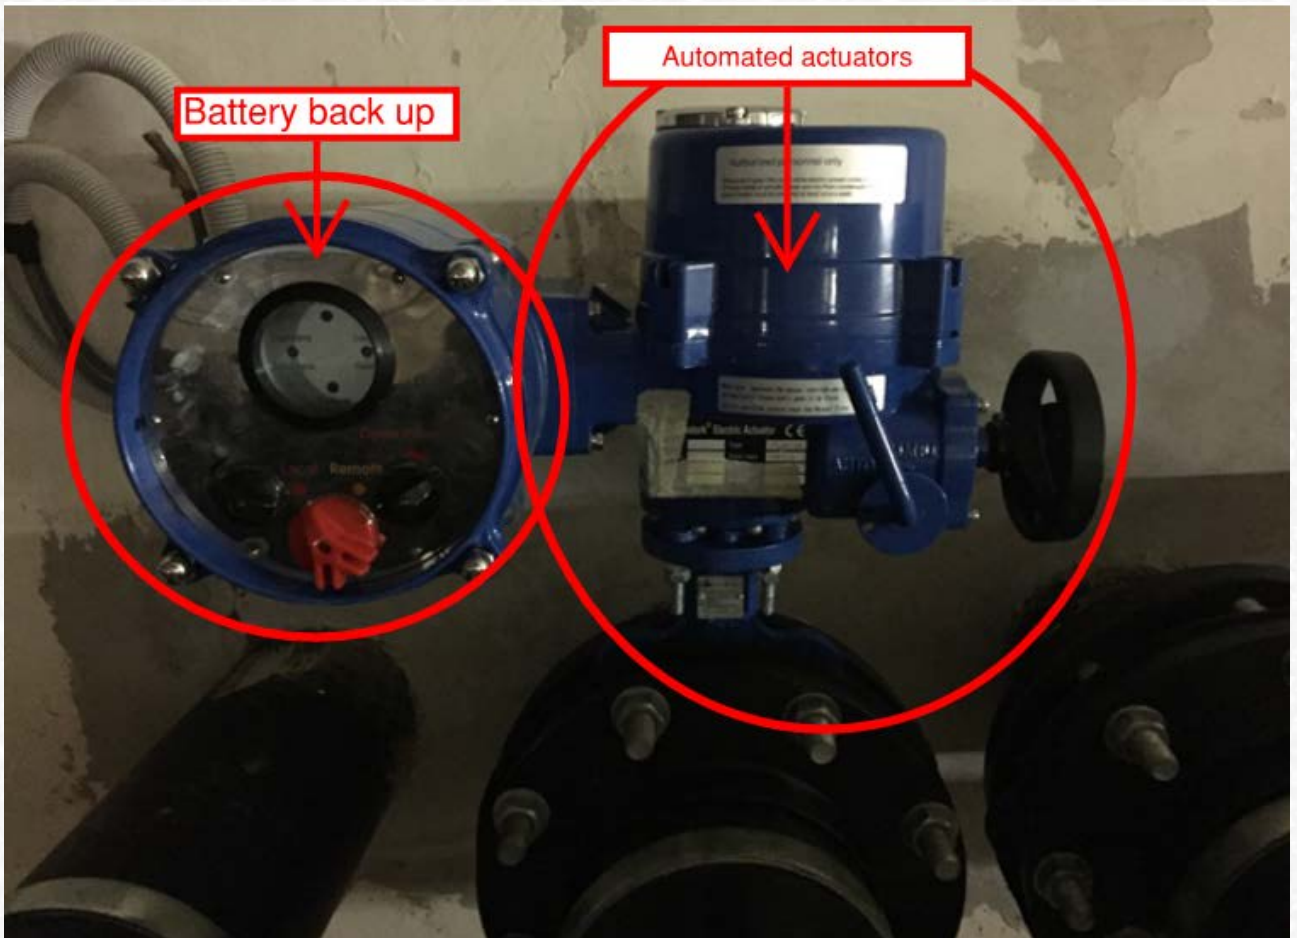

CONTACT INFO

- +6 012-307 3753
- skyflow@skyflow.com.my
- 08:30 AM - 05:30 PM

ADDRESS

HEAD OFFICE
No. 45 Jalan PJU 1A/15, Taman Perindustrian
Jaya, Ara Damansara, 46050 Selangor Darul
Eshan, Malaysia